


Model : Trinity
Version: T
Sentry : T1.0 to T2.0

Fenwal 3 Flash Error A


Ignition Lockout

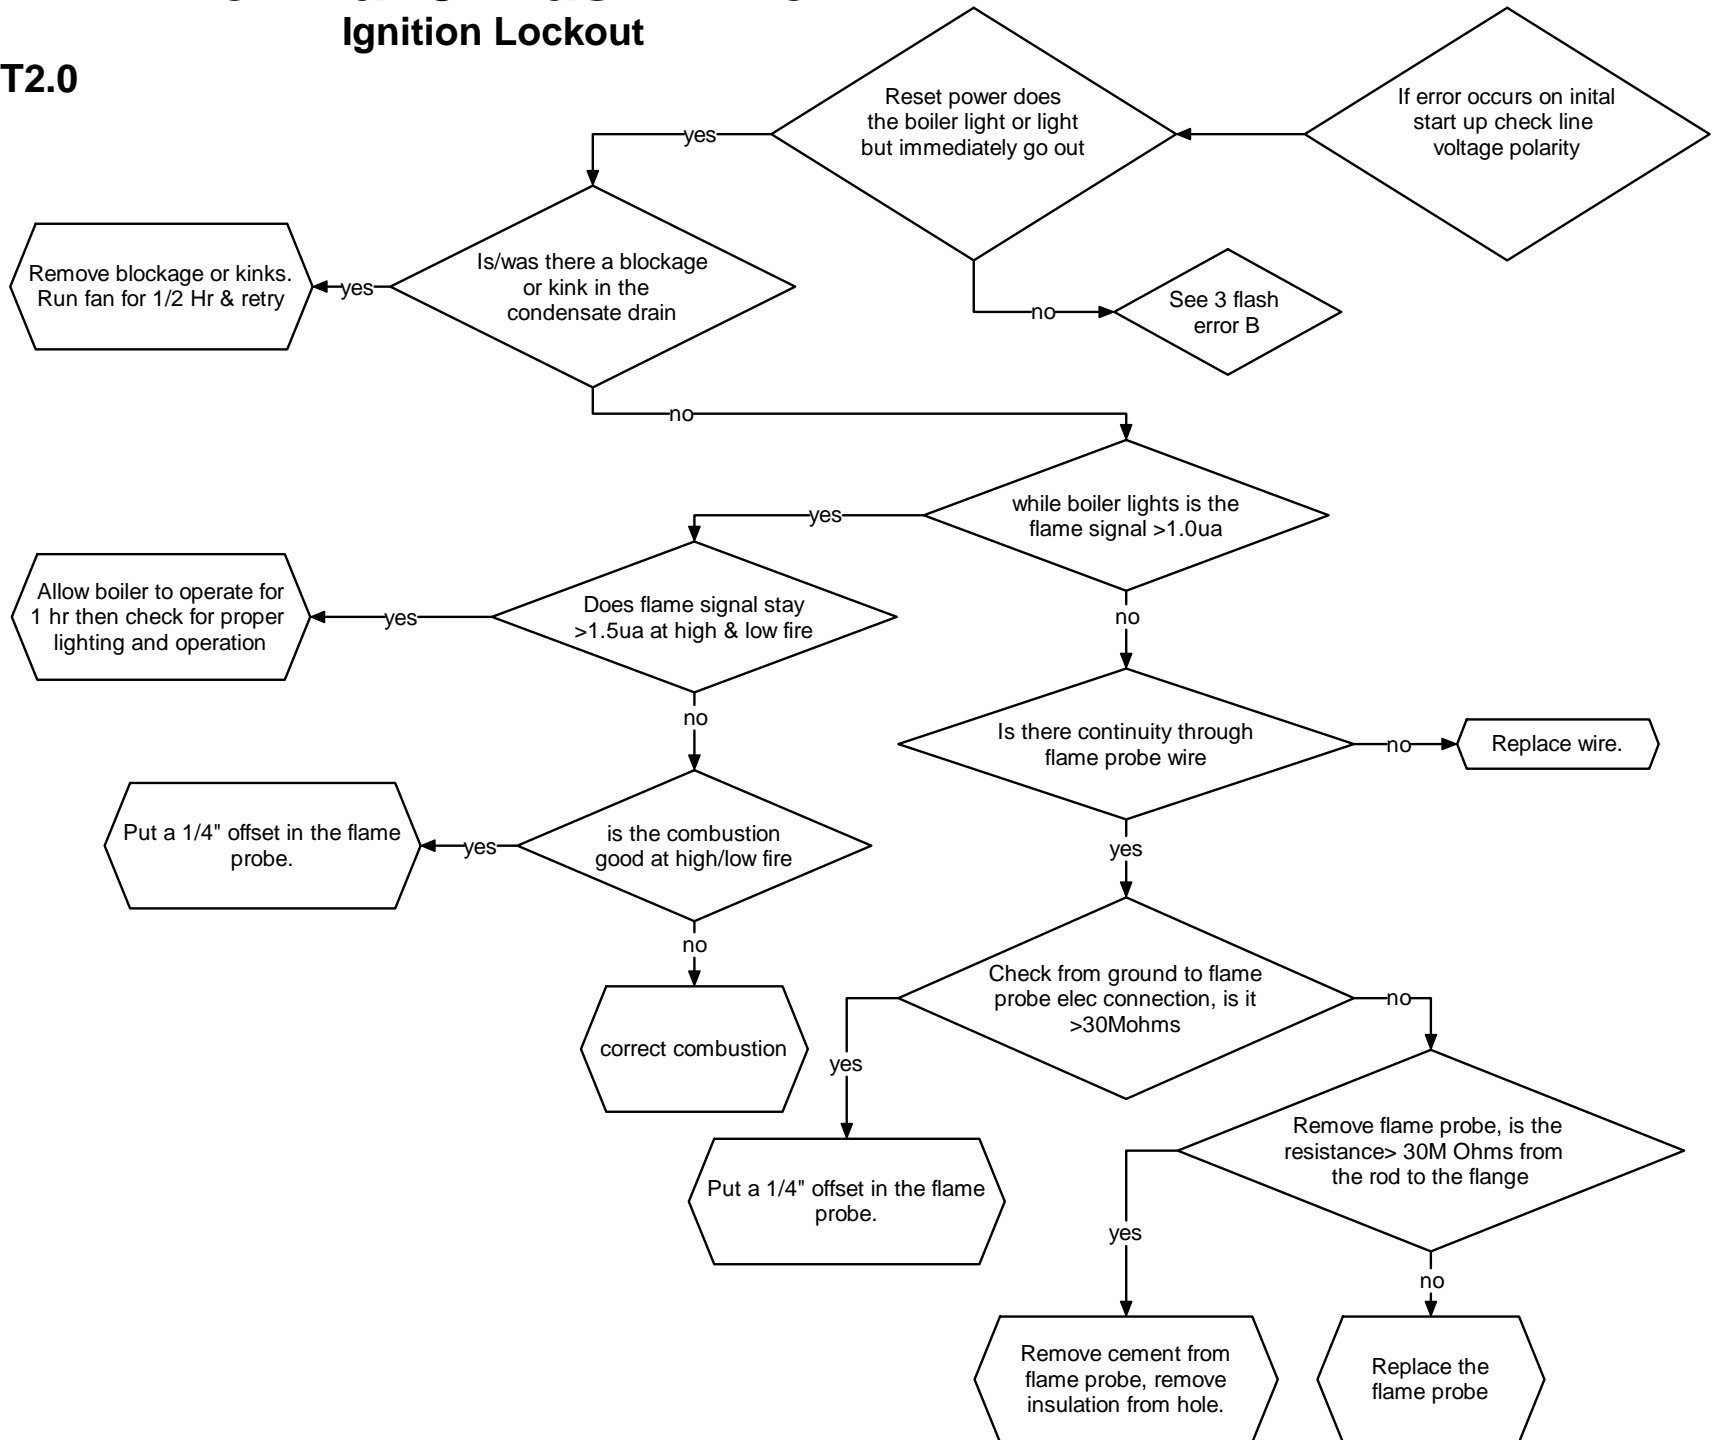

Model : Trinity
Version: T
Sentry : T1.0 to T2.0


Fenwal 3 Flash Error B

Ignition Lockout

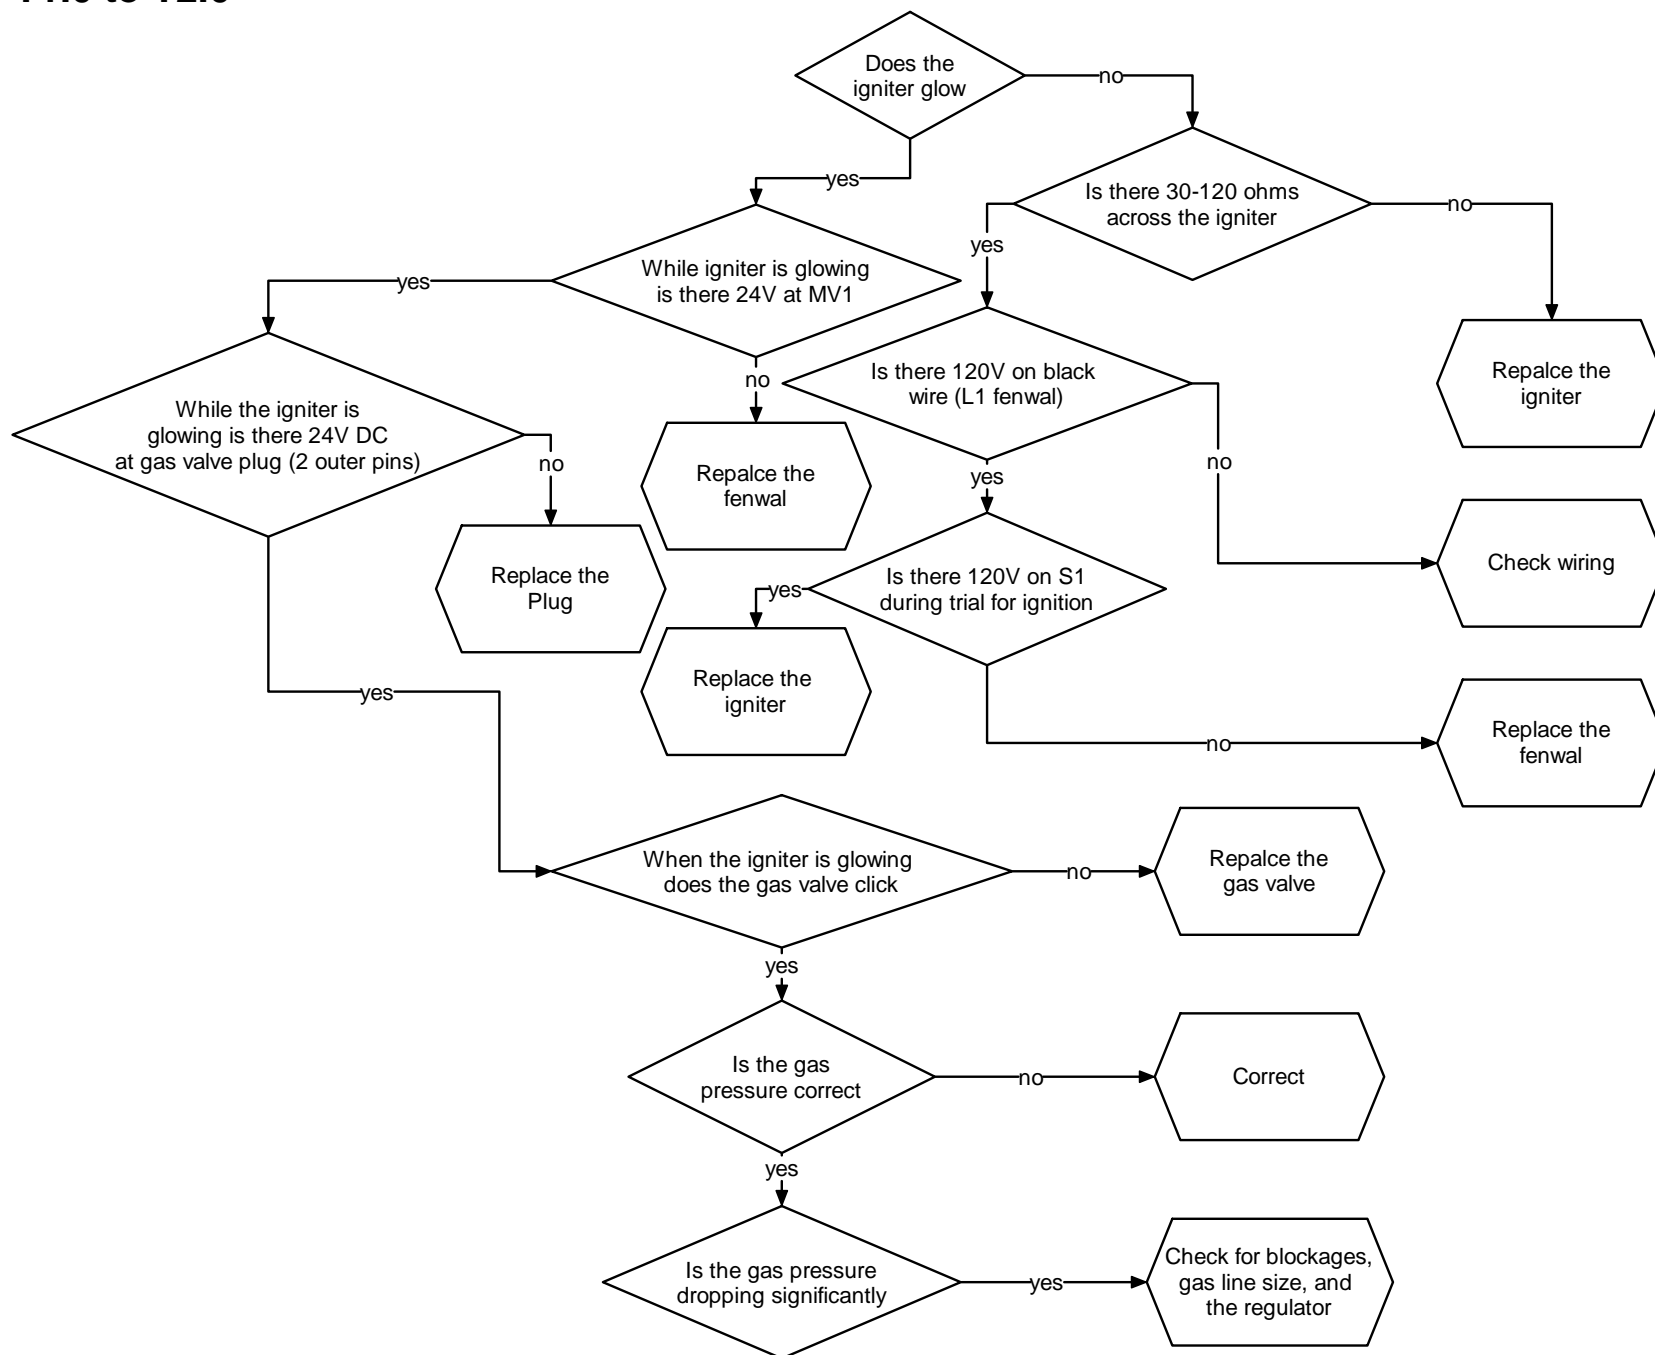


Model : Trinity
Version: T
Sentry : T1.0 toT2.0

ASC Error on Sentry

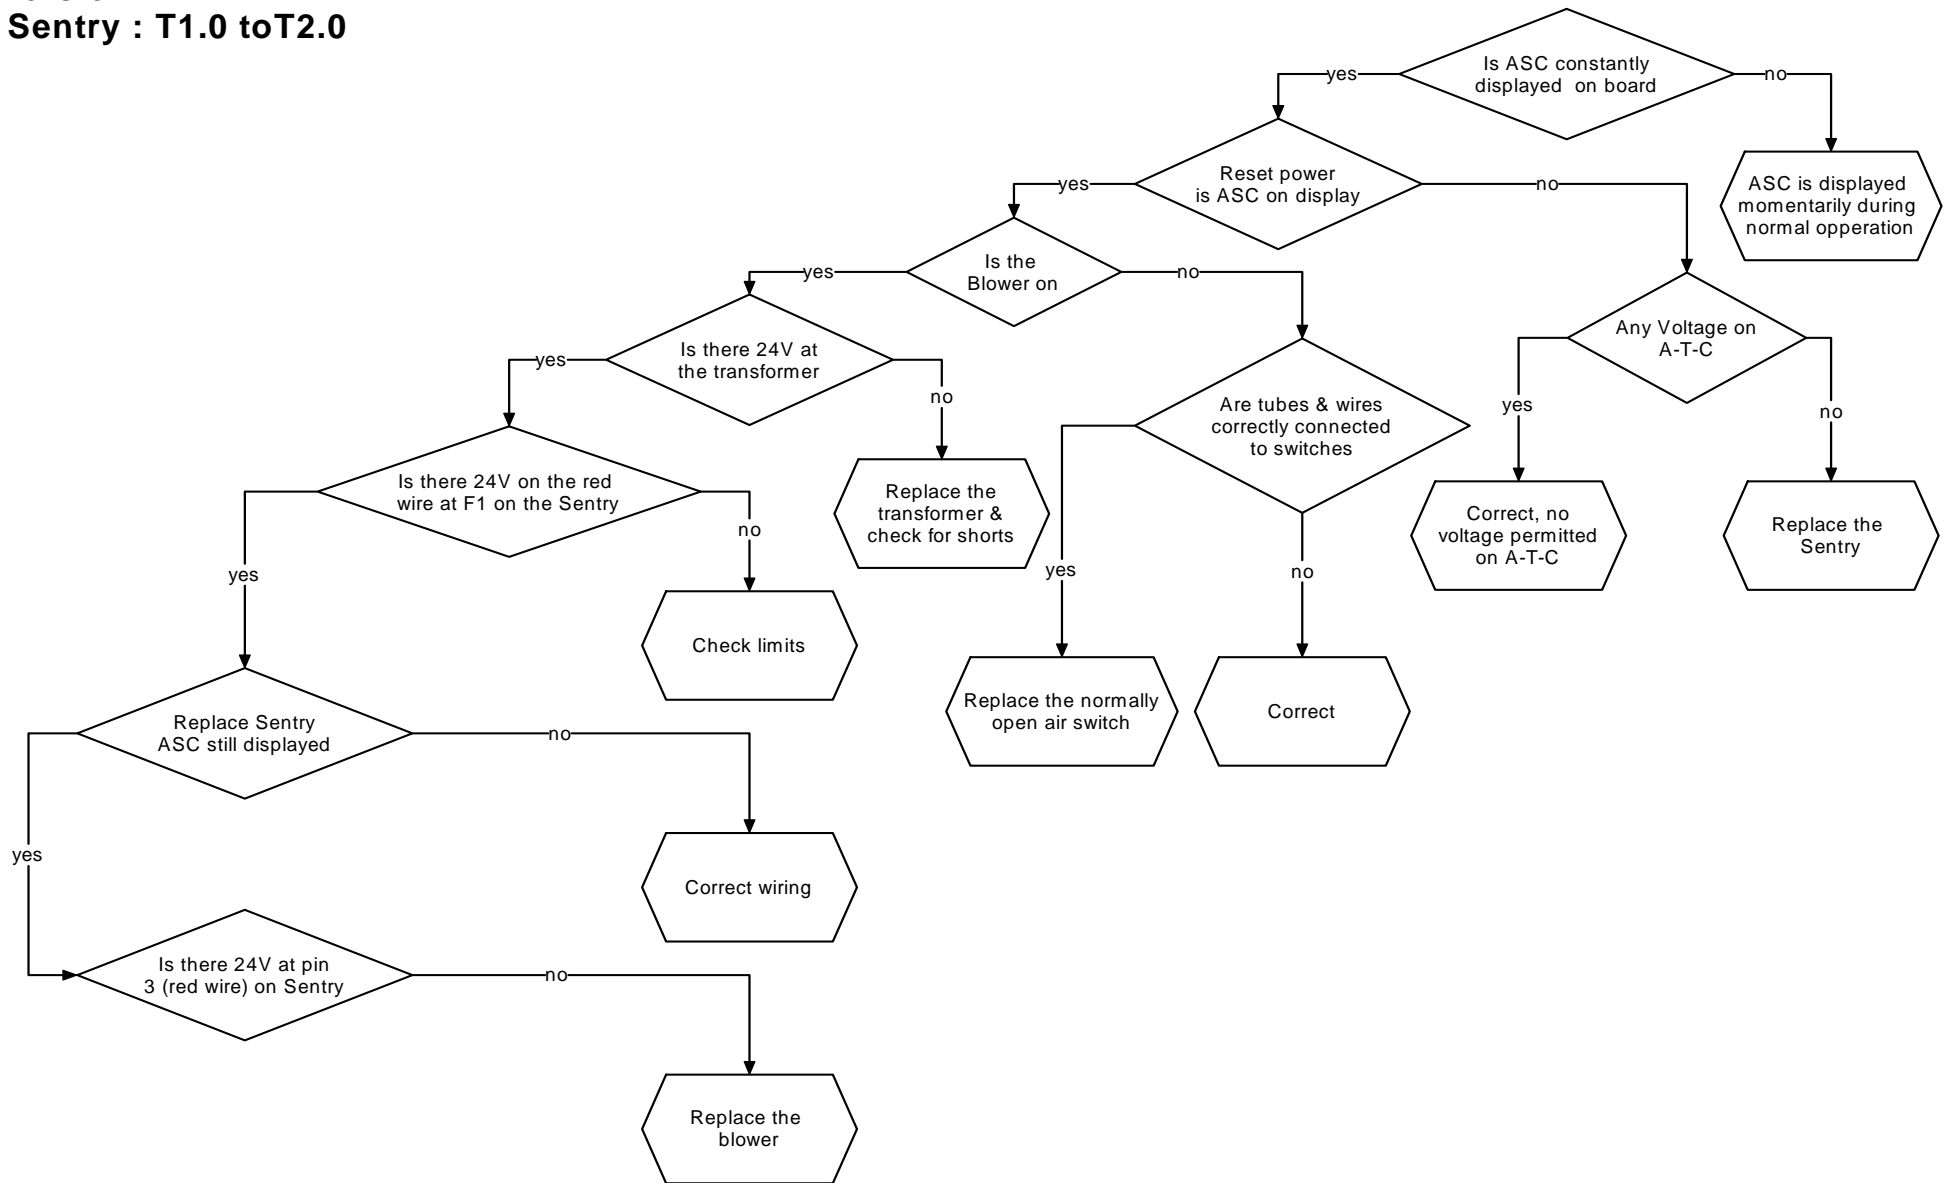


Model : Trinity
Version: T
Sentry : T1.0 to T2.0

ASO Error on Sentry

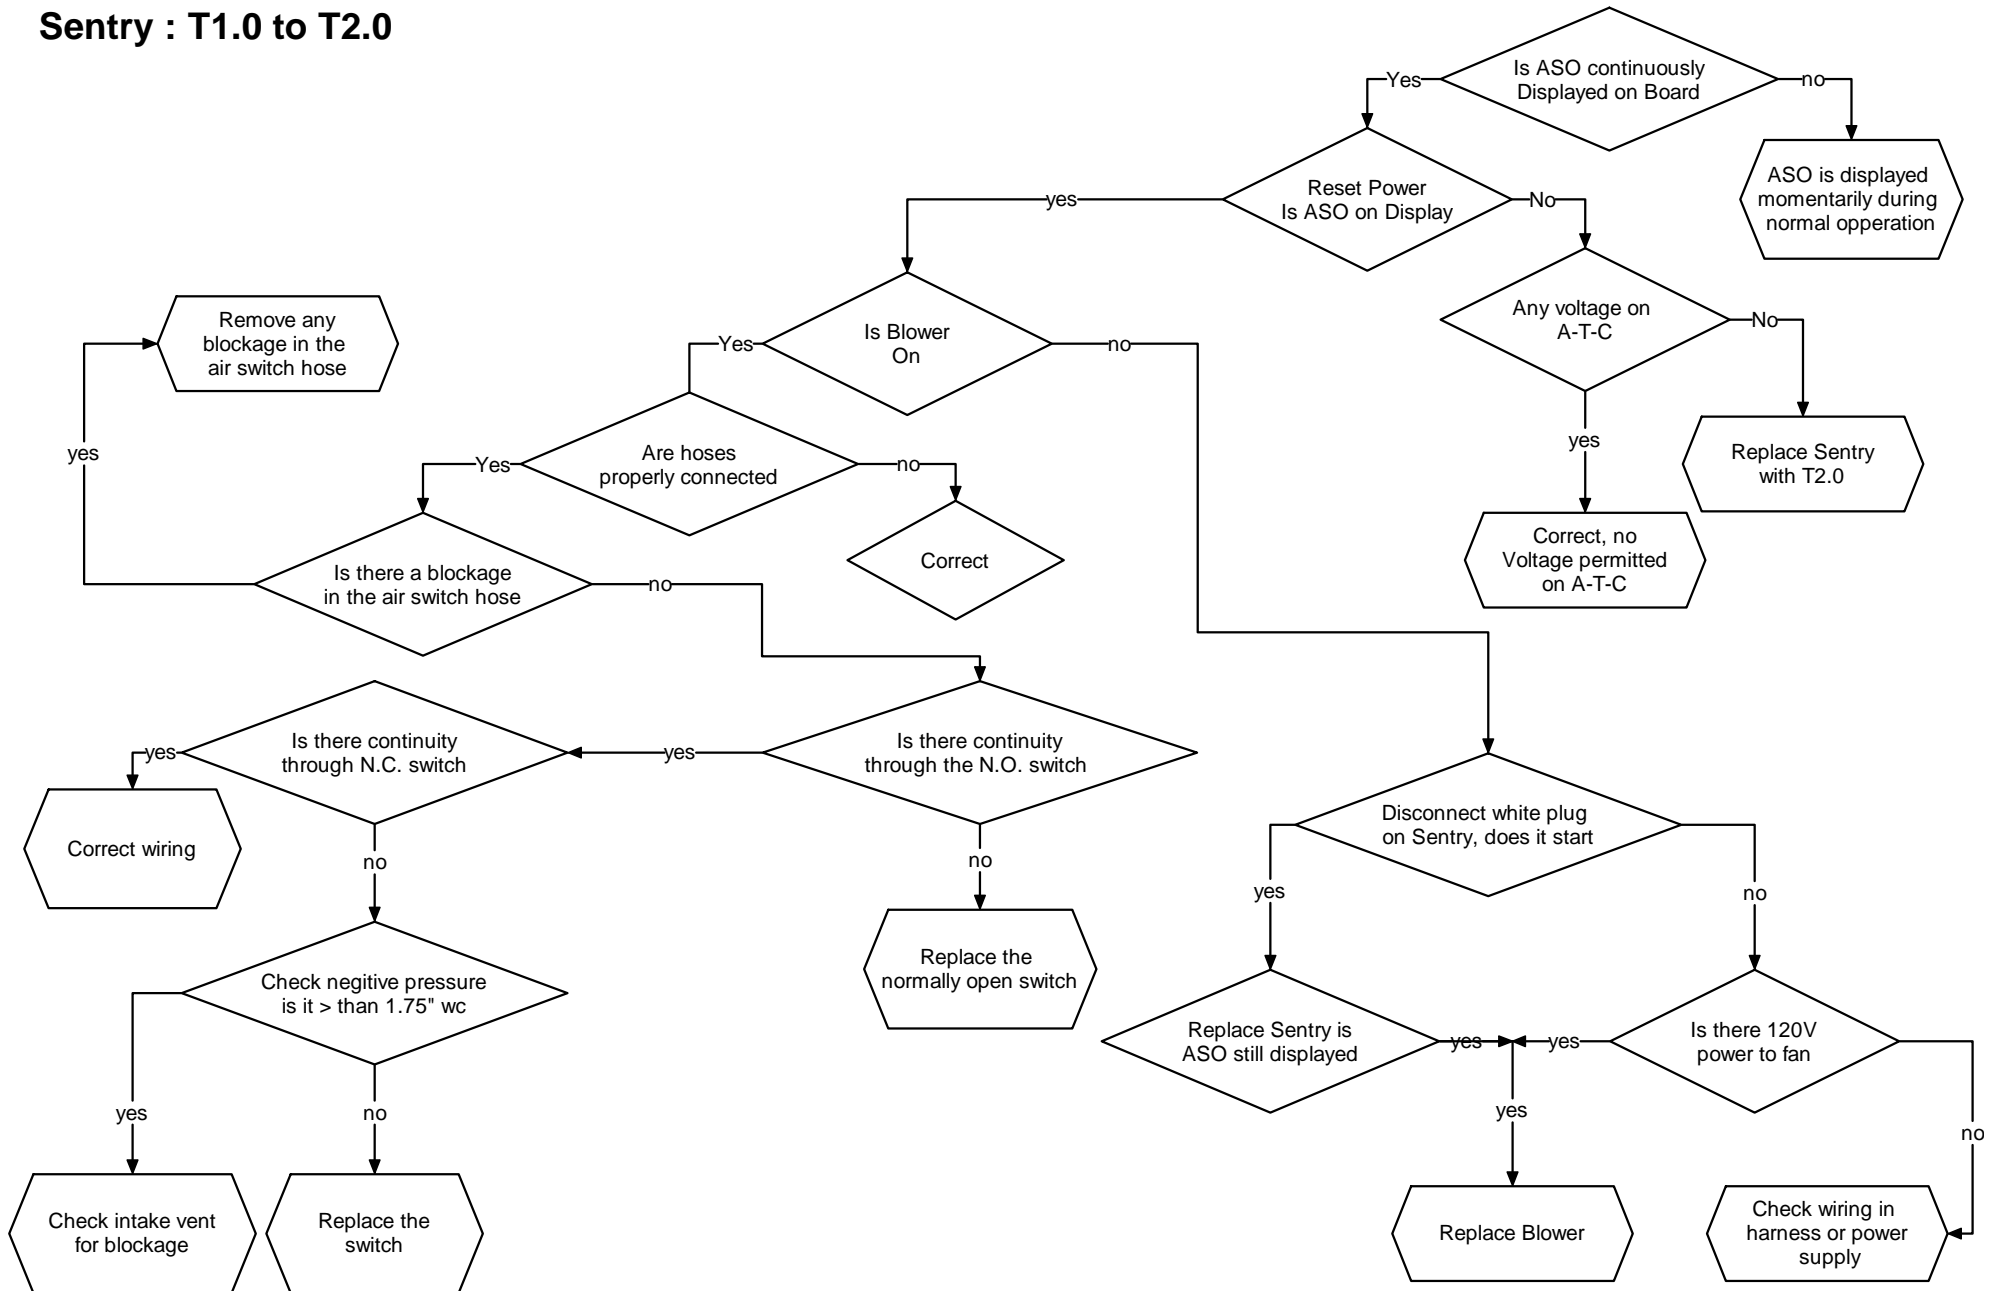


Model : Trinity
Version: T
Sentry : T1.0 to T2.0

Boiler Bangs Or Hisses

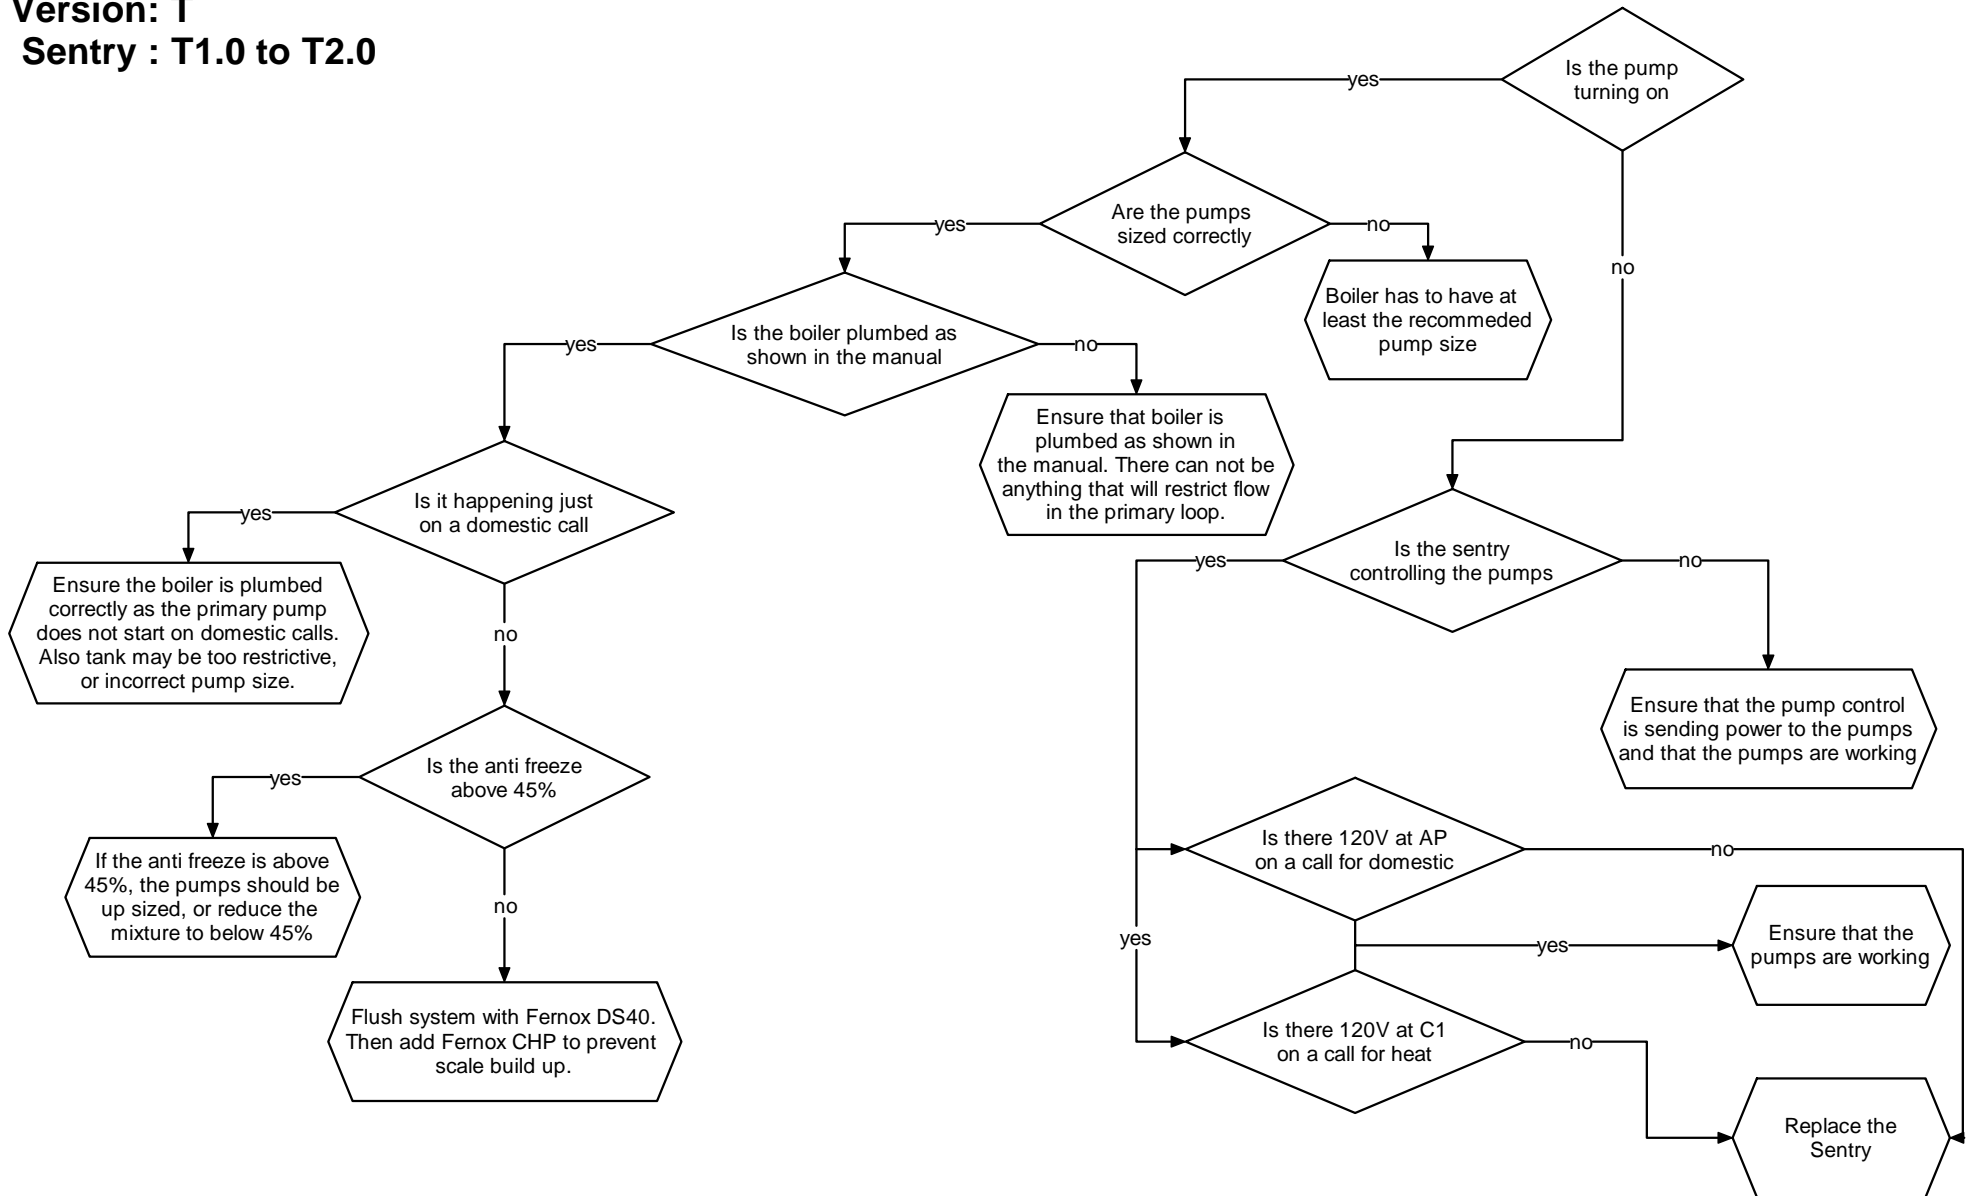


Model : Trinity
Version: T
Sentry : T1.0 to T2.0

Burner & Sentry LED off

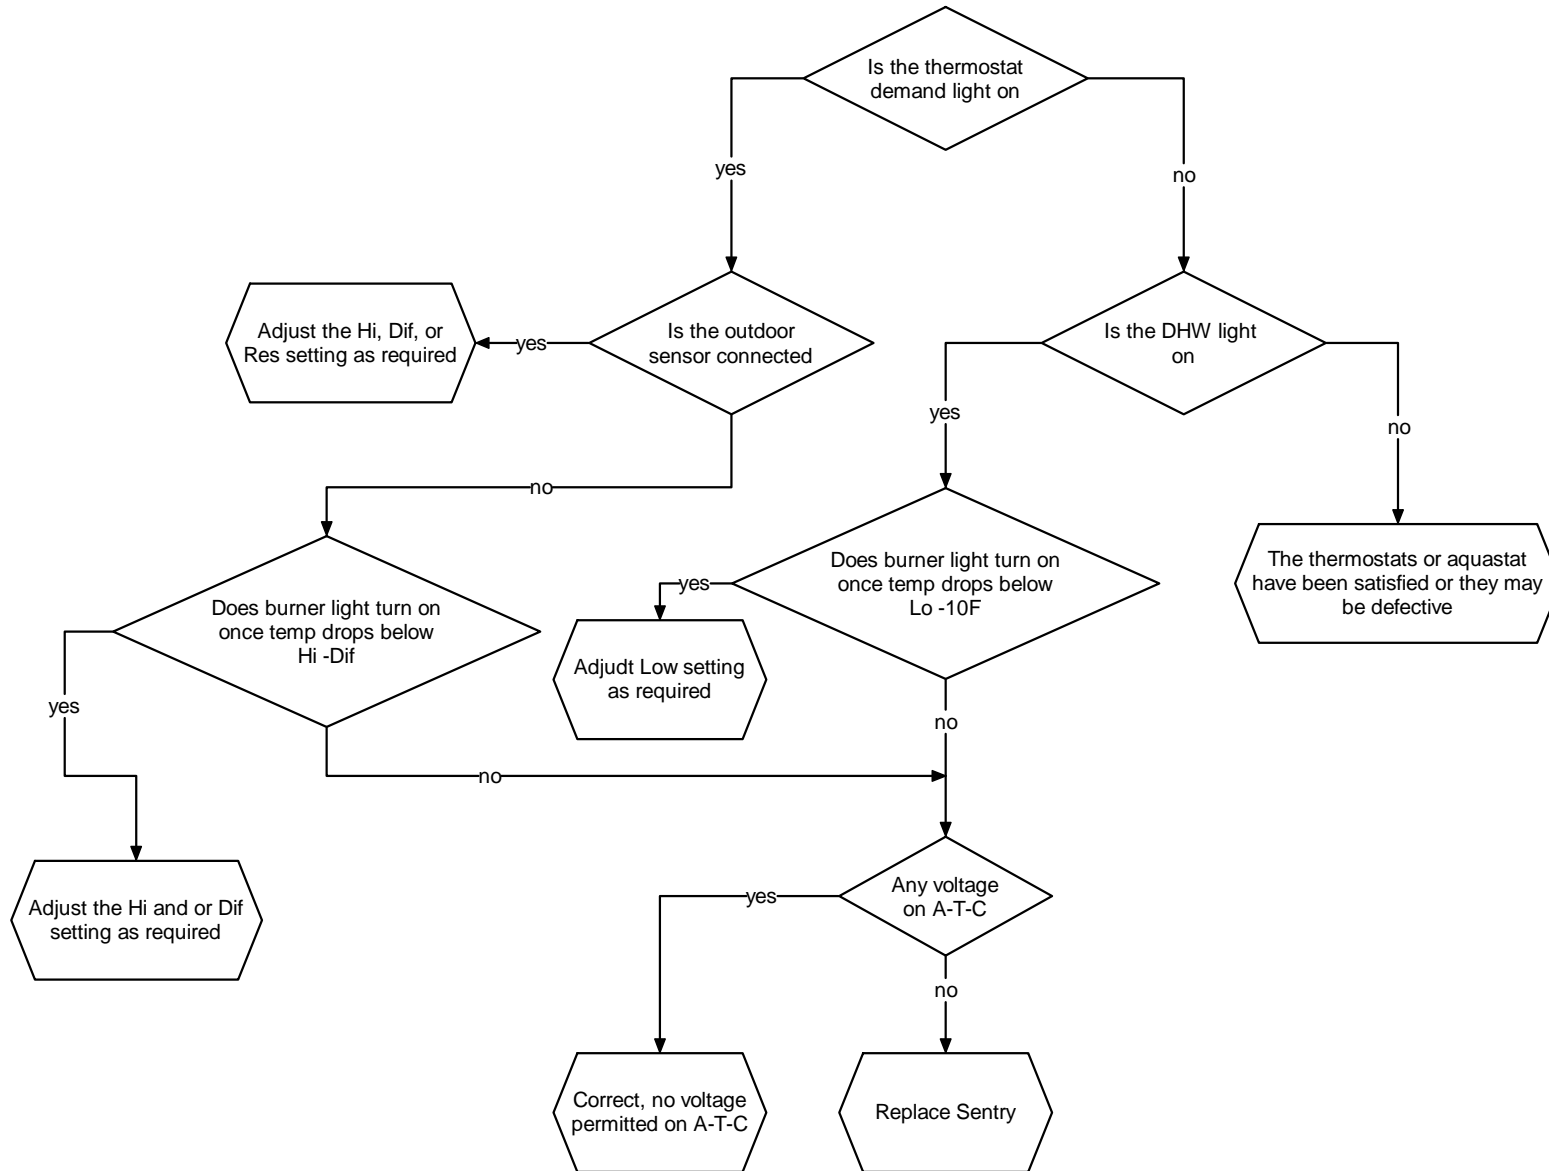


Sentry display Goes Blank

Model : Trinity
Version: T
Sentry : T1.0 to T2.0

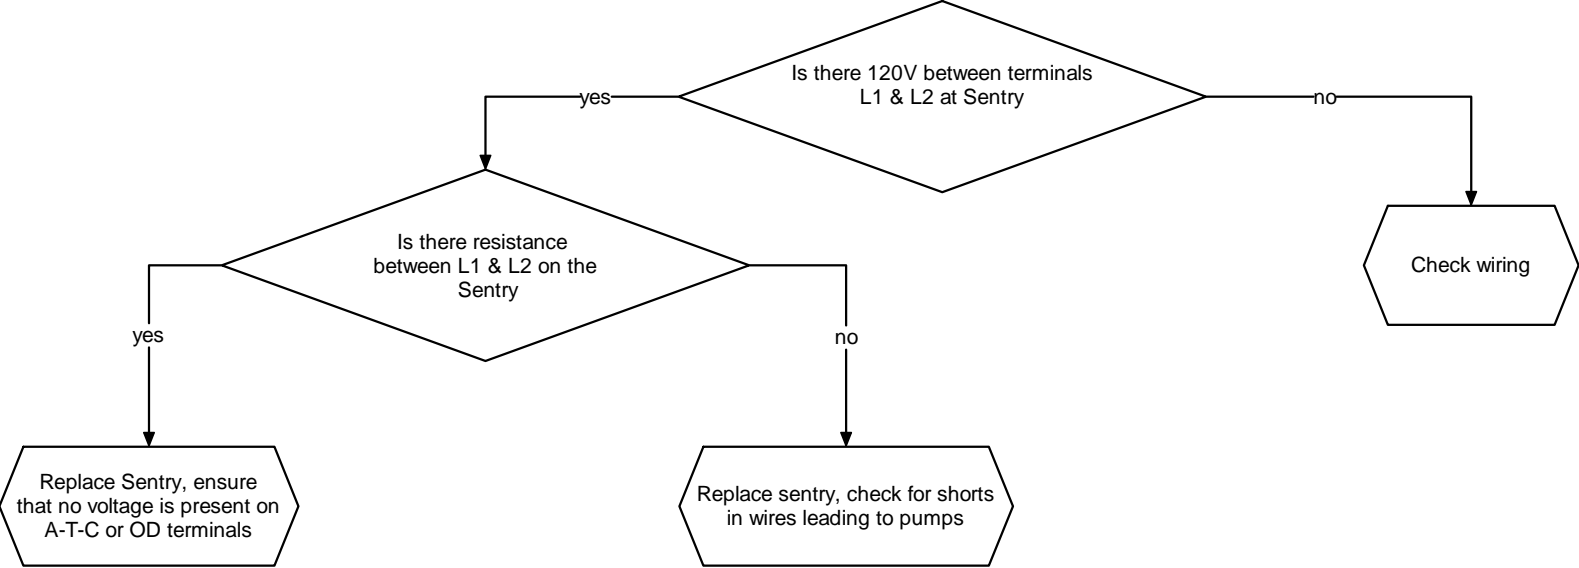


Model : Trinity
Version: T
Sentry : T1.0 to T2.0

ER1 & ER2 Sentry

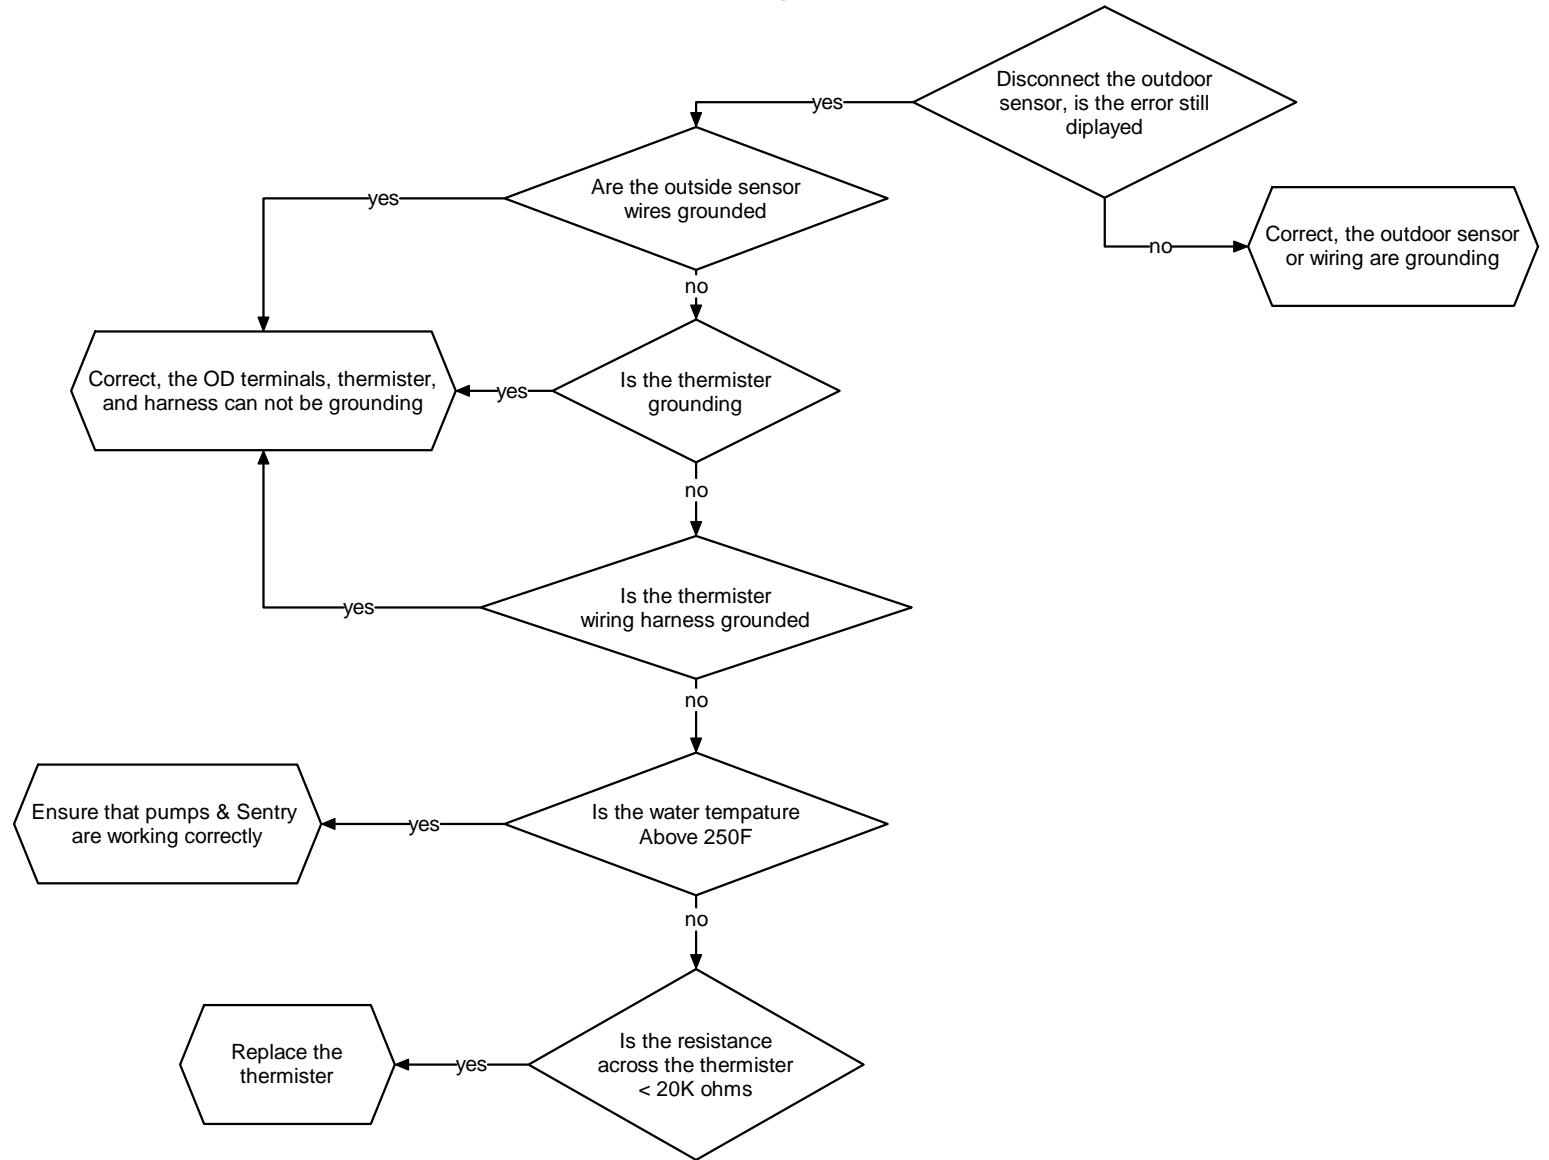


Model : Trinity
Version: T
Sentry : T1.0 to T2.0

ER3 on Sentry

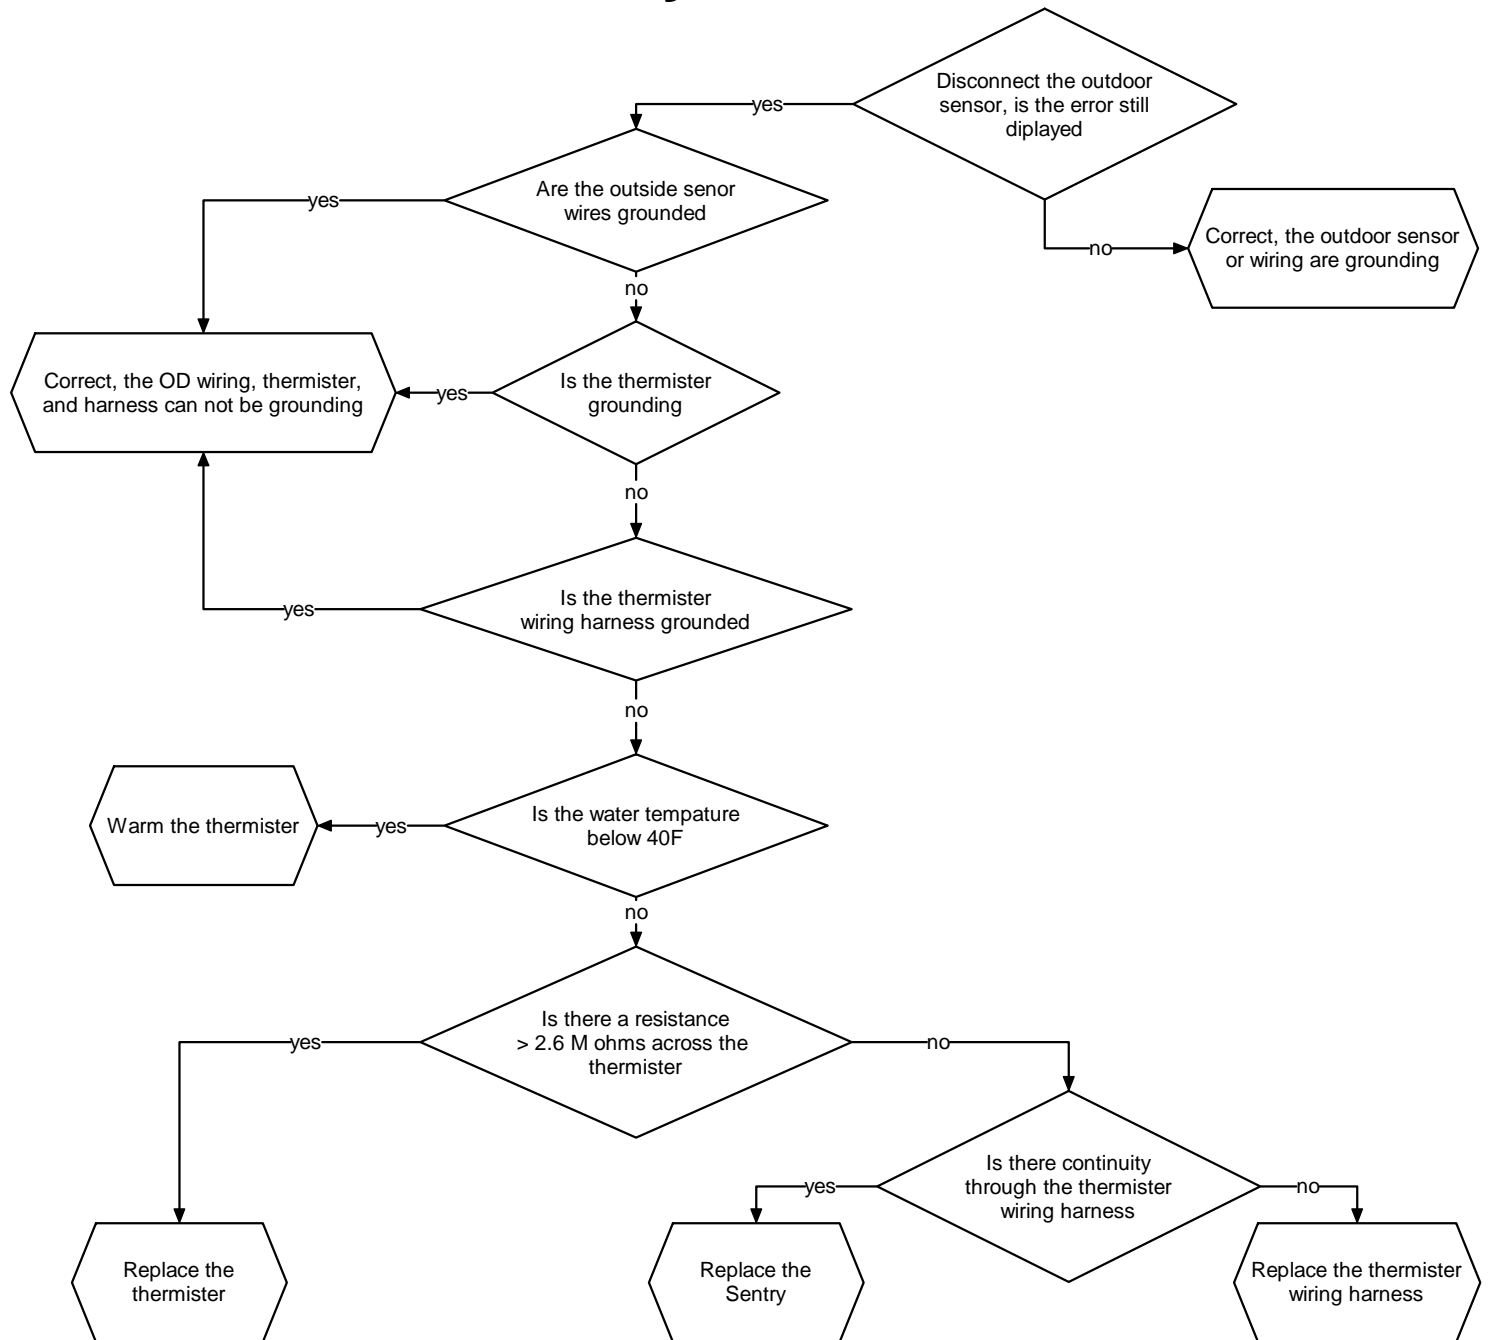


ER5 on Sentry

Model : Trinity
Version: T
Sentry : T1.0 to T2.0

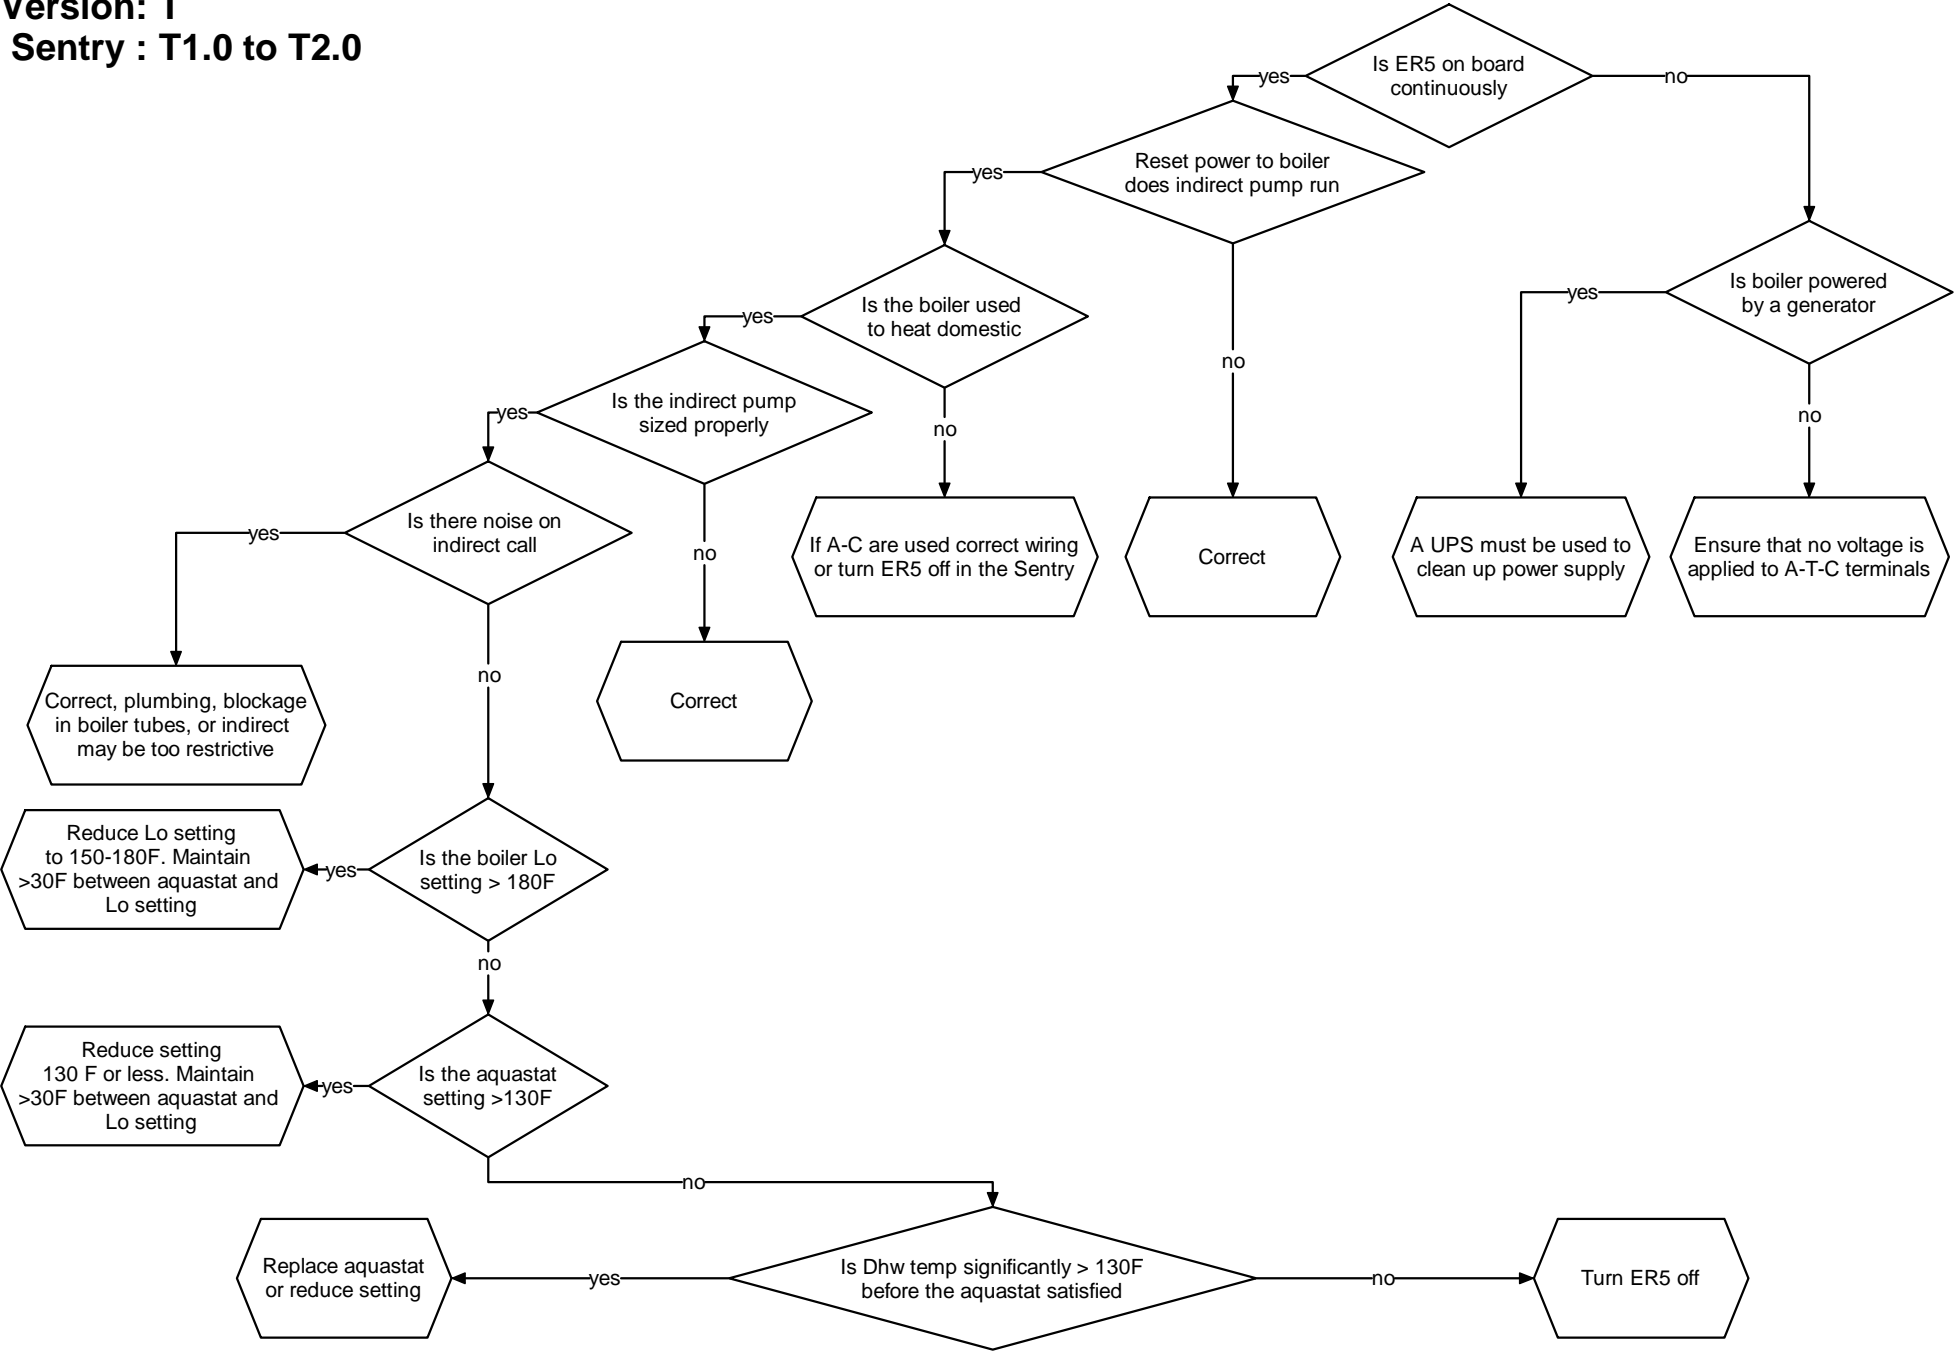


Ignition Sequence Not Activating (No Error)

Model : Trinity
Version: T
Sentry : T1.0 to T2.0

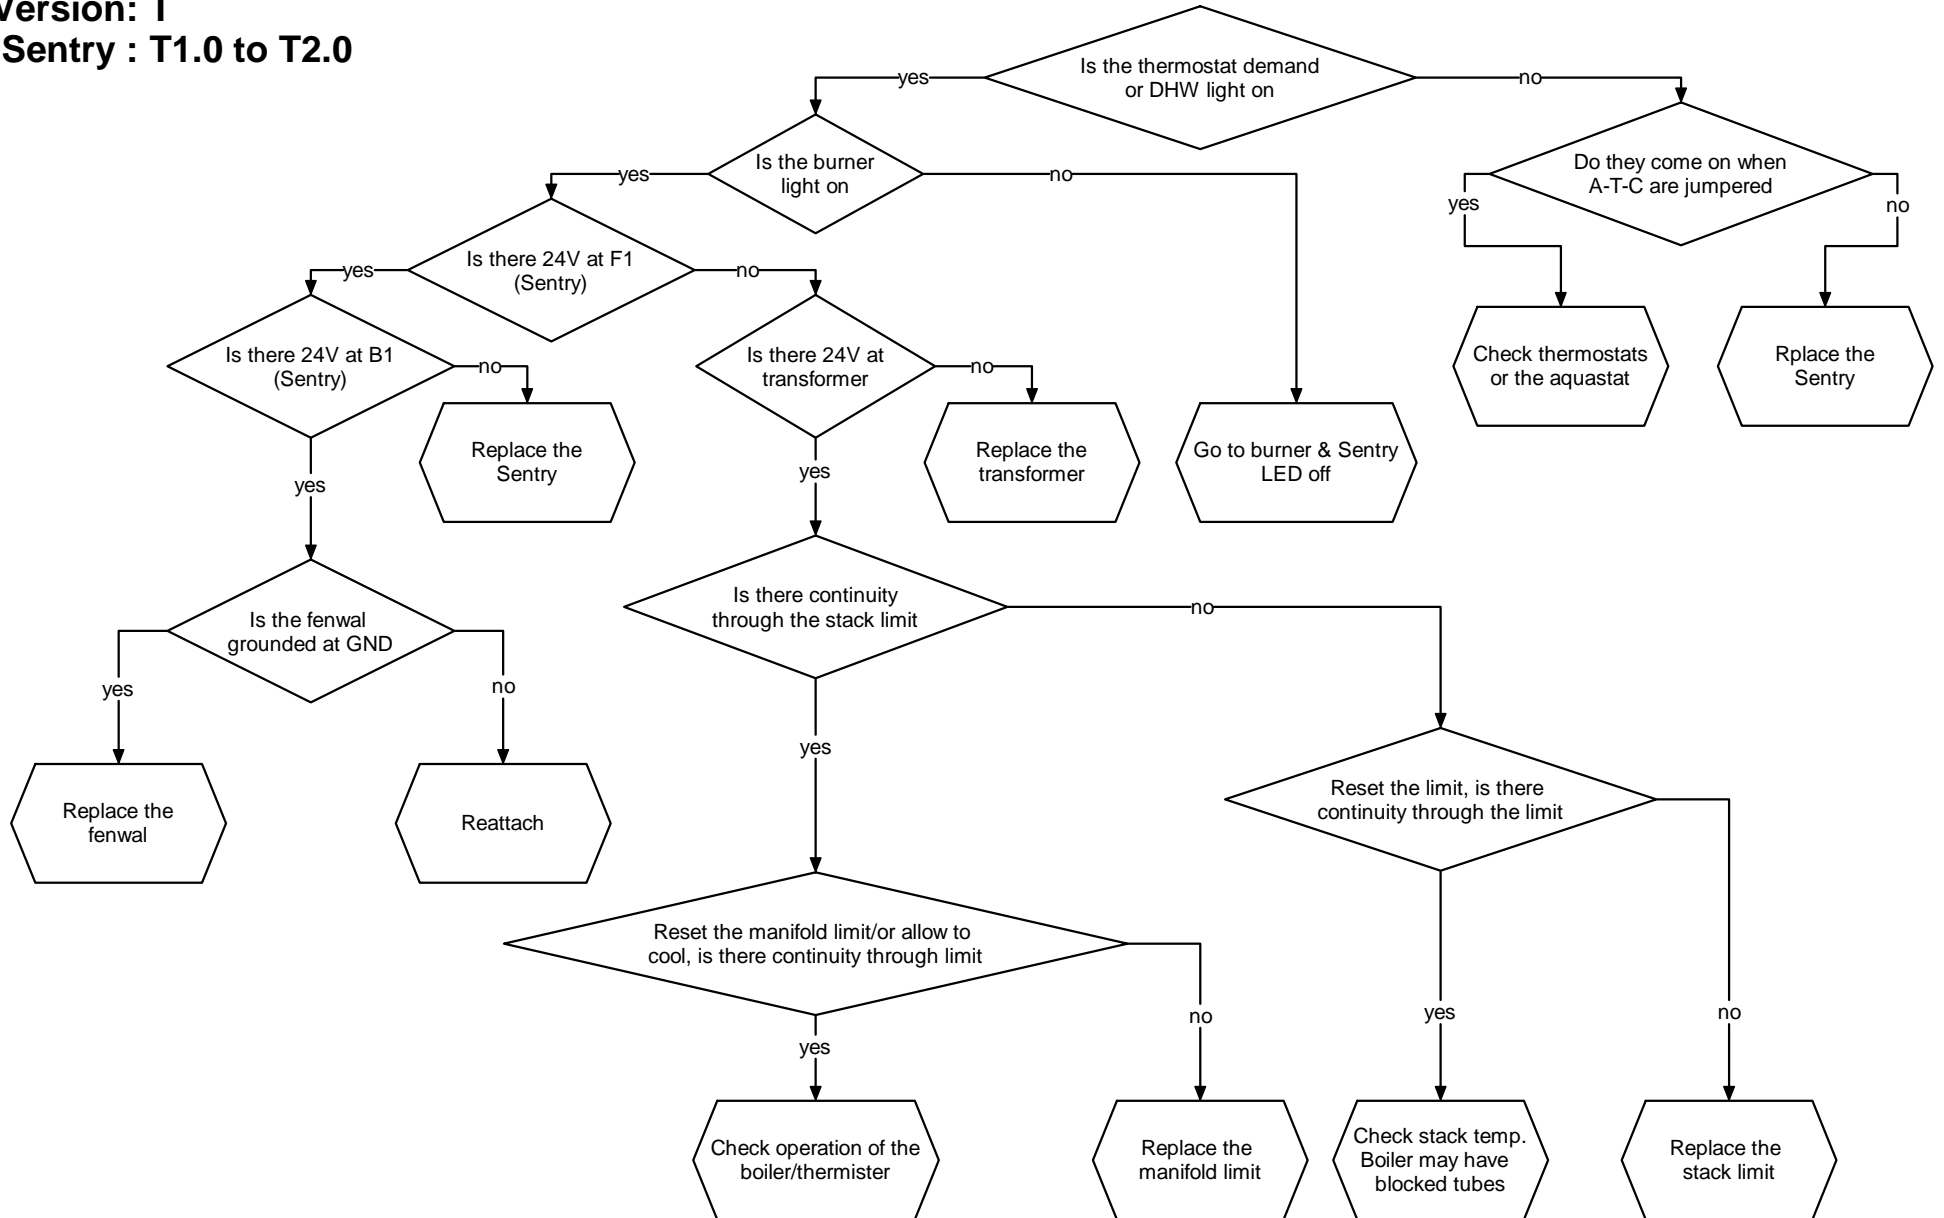

Model : Trinity
Version:T
Sentry : T1.0 toT2.0

Boiler lights rough

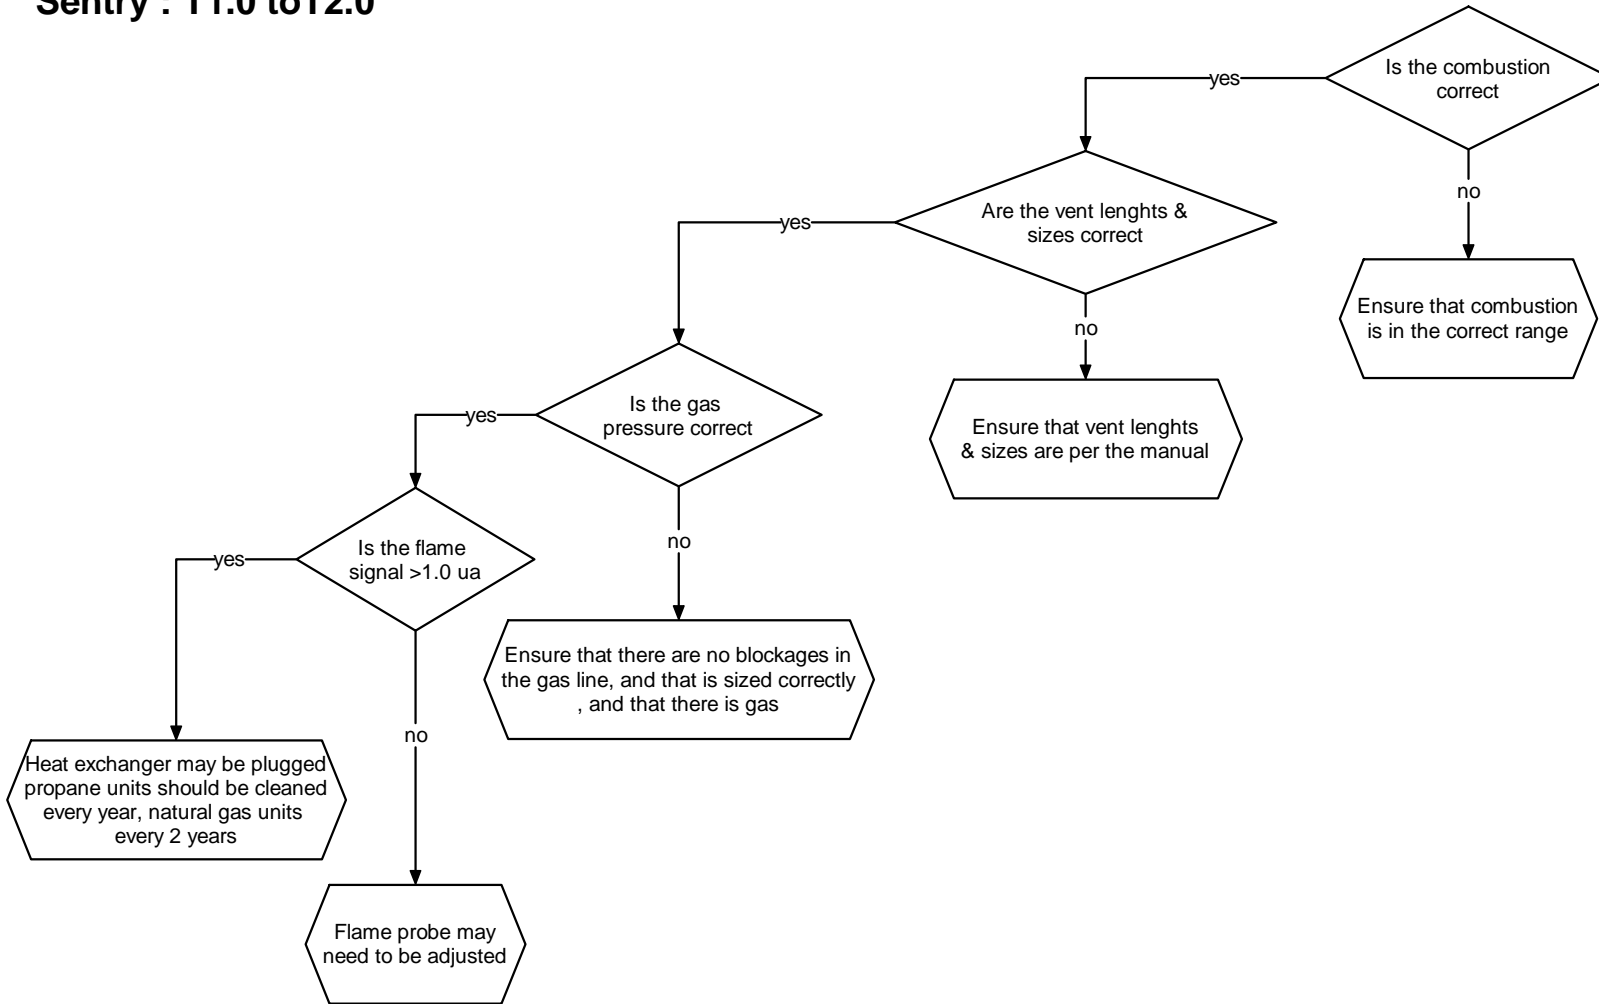

Sentry locks up

Model : Trinity
Version:T
Sentry : T1.0 to T2.0

