


Trinity Flow Switch Installation

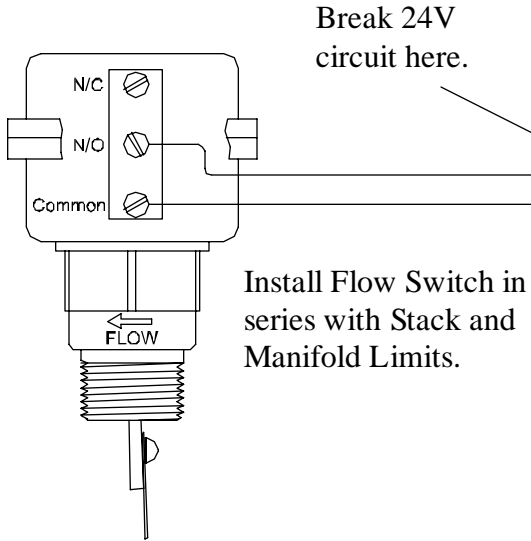

Flow Switch (McDonnell & Miller Series FS8-W)
 - Must be installed in a 1" tee.
 - Use normally open contacts to break 24V to burner

